



SCHLEIFENBAUER PRODUCT IDENTIFICATION SYSTEM

All product IDs start with S (Schleifenbauer)

Customer reference: Here you put a **unique 3 position alfa-numerical code**. This could be a reference to yourself (reseller) or to your customer. Ex.: customer is "Infra Data Systems" hence this code could be: IDC. This is defined by the reseller !

Form factor: **H** = Horizontal
D = Double Horizontal
V = Vertical
G = Gateway
C = Cable

Main input: **I** = Input measuring
N = No input measuring
C = Definilink Controller
X = Definilink Slave

Output: **M** = output measuring
S = output switching
B = both
N = none

Phase: **1** = single phase
3 = 3 phase

Amperes: **1** = 16A
3 = 32 A

Configuration code: factory specified **2 digit code** which determines the exact configuration.

Order code: factory defined counter that adds 1 to the value at each order of this particular configuration. Ex. this number is set to **001** at the first order, **002** for the second order of this same configuration.

pos	1	2	3	4	5	6	7	8	9	10	11	12	13	14
value	S											-		

product code

order code

product ID