



SCHLEIFENBAUER PRODUCT IDENTIFICATION SYSTEM

All product IDs start with **S** (Schleifenbauer)

Customer reference: Here you put a unique **3 position alfanumerical code**. This could be a reference to yourself (reseller) or to your customer.
Ex.: customer is "Infra Data Systems" - hence this code could be: IDC. This is defined by the reseller!

Form factor: **H** = Horizontal
D = Double Horizontal
V = Vertical
G = Gateway
C = Cable

Input: **I** = Input measuring
N = No input measuring
C = Definilink Controller
X = Definilink Slave
P = Pass-through
J = Junction Box

Output: **M** = Output measuring
S = Output switching
B = Both
N = None

Phase: **1** = 1 phase
3 = 3 phase

Amperes: **1** = 16A
3 = 32 A
6 = 63A

Order code: factory defined counter that adds 1 to the value at each order of this particular configuration.
*Ex.: this number is set to **001** at the first order, **002** for the second order of this same configuration.a*

Configuration code: factory specified **2 digit code** which determines the exact configuration

POS	1	2	3	4	5	6	7	8	9	10	11	-	12	13	14
VALUE	S														

